

Installation and Operation of Receiver Hitch Carrier

The Receiver Hitch Carrier is designed to allow a single operator to transport a RESTORE-LITE[®] unit without heavy lifting. The hitch carrier is adjustable for height and will mate with any 2" receiver hitch.



RECEIVER HITCH CARRIER

• P80077

Included parts:

- Receiver post
- Cradle
- Safety pin
- Ratchet strap
- Mounting bolts

1

LOCATE CORRECT POSITION OF CRADLE (12-1/2 TO 13 INCHES FROM GROUND LEVEL TO TOP OF CRADLE LIP)

Then tighten bolts (bolt thread needs to face behind cradle)



12-1/2" to 13" from top of cradle lip to ground



Bolt threads face toward rear of cradle

2

PLACE RECEIVER POST INTO VEHICLE RECEIVER. SECURE WITH INCLUDED LOCKING PIN.

Carrier inserted and secured into receiver



3

ROLL RESTORE-LITE® UNIT TOWARD CARRIER TO ALIGN WITH CRADLE


RESTORE-LITE® unit aligned with cradle opening



4

LOWER HANDLE TO ELEVATE RESTORE-LITE® STAND, ROLL INTO CRADLE, LIFT UPWARD UNTIL SEATED IN CARRIER

RESTORE-LITE® stand and cradle lip will interlock to help secure unit to carrier

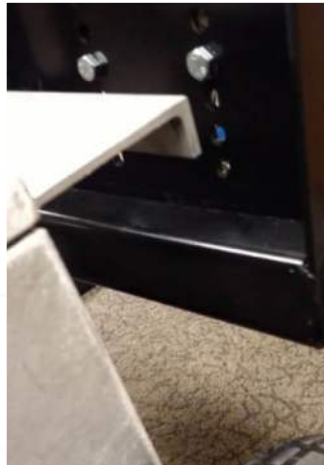

5 CONNECT RATCHET STRAP HOOKS TO CARRIER LOOPS AND TIGHTEN



6 READY FOR TRANSPORTATION



Always use in accordance with your company practices and procedures.



Visit sncmfg.com to learn more about RESTORE-LITE® or scan the QR code with your mobile device to be taken directly to our website.



www.sncmfg.com | 800-558-3325 | info@sncmfg.com

T0607
07/23